


Affinity™ Touch-Free Soap Dispenser Installation Instructions

1 Open Cover & Remove Module




Insert key into key access holes on top of dispenser.

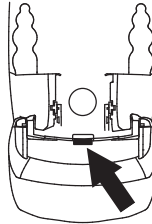


Remove electronics and battery module by pressing down on the tab at the bottom of the backplate and lifting the module out from the bottom.

IMPORTANT!

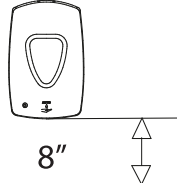


Minimum installation height is 8" above sink or counter.

2a Fastener Installation

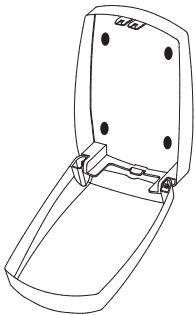

1. Align dispenser, mark holes.
2. Drill holes using a 7/32" (5.5mm) bit.
3. Insert anchors into holes. Screw fasteners halfway into anchors.
4. Mount dispenser onto fasteners.
5. Tighten fasteners. Do NOT over tighten.

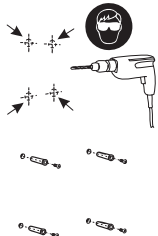

2b Tape Installation


Should only be used for smooth surfaces.



1. Clean installation surface with included prep pad. Let surface dry for 60 seconds.



2. Peel backing paper from installation tape, open cover.

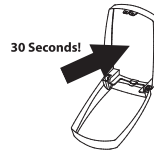

30 Seconds!

3. Position dispenser, press firmly on **INSIDE** (not just sides) of backplate for 30 seconds.



24-HRS


4. For maximum adhesion, do not load refill cartridge for 24 hours.

3 Re-Install Module, Install Batteries, Position Cradle


Re-Install electronics and battery module.



Remove battery covers (2), install batteries (4).

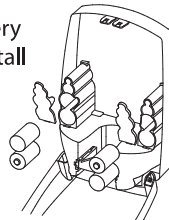

Position green cradle/pump receiver down to accept refill valve.

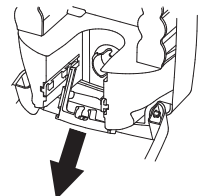

4 Insert Soap Refill, Close Cover

